

Naples Fire Pit Table

Installation Instructions for Naples Fire Pit Table



IMPORTANT

Please consult your Crystal Fire instruction manual for detailed instructions and important information related to the burner installation including: lighting and operating instructions, safety information, and proper tightening of connections with two wrenches.

DO NOT ATTEMPT TO INSTALL CRYSTAL FIRE BURNER WITHOUT FIRST CONSULTING THE CRYSTAL FIRE OWNER'S MANUAL.

Contents

Required Tools	2
Included with your Fire Pit	3
Assembly Instructions	4
Gas Connections	7
Igniter Installation	9
Glass Installation	10
Position Your Tank	.11

Required Tools

 


 
Utility Knife

To cut and remove packaging



2 Open Ended Wrenches





To protect hands from glass and sharp edges during install



One AAA Battery (not included)

Required for electric spark igniter installation




Phillips Screwdriver To attach mounting screws to control panel



Two people are required for this

Included with your Fire Pit

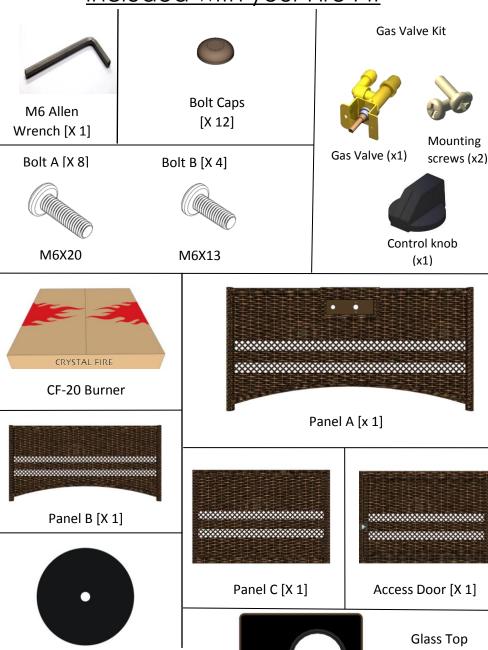

Glass Cover

Assembly Instructions

<u>INSTALL NOTE:</u> Final tightening of bolts should be completed following installation of all panels.

- 1. Unpack the fire pit table contents from the box, and remove individual packaging from each piece. Remove 4 pre-installed bolts (*Bolt B*) from the underside of the *Glass Top*.
- 2. Carefully lay the <u>Glass Top</u> on a soft, flat surface. Attach <u>Panel A</u> using <u>Bolt B</u> (x2) as shown below.



3. Attach <u>Panel B</u> using 2 more <u>Bolt B</u> as shown below.



4. Attach <u>Panel C</u>, on opposite end from burner opening, using Bolt A (x4) as shown below.



5. Attach the <u>Access Door</u> using 4 <u>Bolt A</u> as shown below.




6. Do a final tightening on the bolts you have installed in your fire pit. Then, with the help of another person, turn the table right side up.




7. Hold the <u>Gas Valve</u> in place from behind the control panel as shown while inserting the two included screws. Use a Phillips screwdriver to fasten. Attach control knob by pressing on to the valve stem.

Top

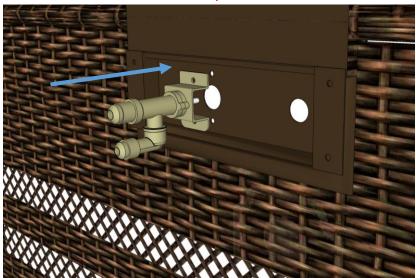

Bottom

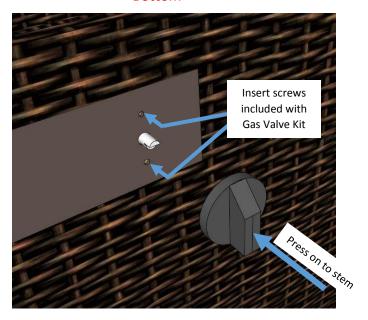



Gas Connections

Read and understand your Crystal Fire owner's manual before beginning burner hookups or using the device. Do not use Teflon tape or pipe dope on flare fittings.

1. Reach inside the burner cut-out and attach natural gas supply line using a 3/8" flare fitting, or attach the included black rubber propane hose and regulator to the bottom fitting of the control valve.

TIGHTEN SECURELY WITH A WRENCH

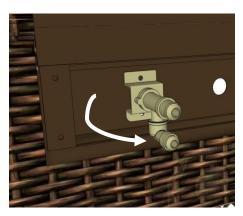


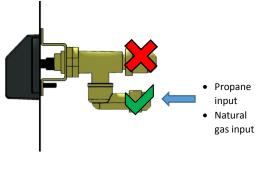




2. Lay the burner upside down on a flat, soft surface to avoid scratching the polished metal. Ensure the correct orifice is installed for the fuel type you are using (see Crystal Fire user manual included with burner for orifice sizing information) Attach the included metal flex hose to the burner.

TIGHTEN SECURELY WITH TWO WRENCHES

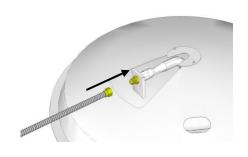


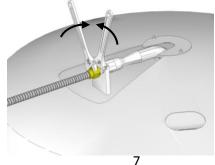

3. Set Burner into the fire pit base as shown below.





4. Attach flex line from the burner to gas valve as shown below.

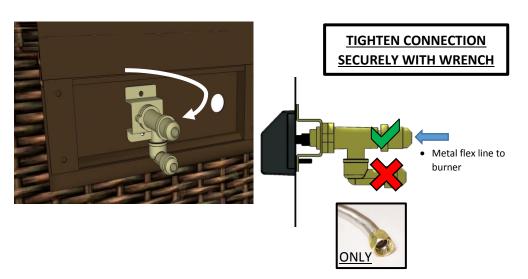

<u>Igniter Installation</u>

 
- Make sure the valve is in the OFF position before beginning.
- Install sparker as shown, using a AAA battery (not included).
 Negative end should be placed inside the CF-SPARKER, positive end outside of the CF-SPARKER.



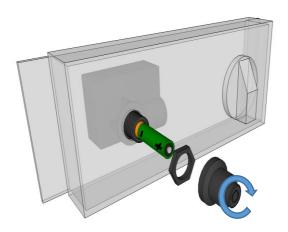

<u>Sparker will not operate correctly without an ignition and ground wire</u> attached.

  Plug both BLACK wires hanging from the burner into the back of the sparker box.



 Test system by pushing the button on the igniter. Consult the troubleshooting section of the Crystal Fire Owner's Manual, if the spark is weak, intermittent, or not present.

Glass Installation

1. Scatter all of the included Glass Beads evenly onto burner surface.



2. Set the burner cover into place on top of the burner.



DO NOT OPERATE CRYSTAL FIRE BURNER WITH GLASS COVER IN PLACE

After installing igniter and making gas connections, verify that all connections are tight and that no leaks are present using a solution of soapy water or a commercially available leak-check solution.

<u>Position Your Tank</u> (if applicable)





- Open door, connect the propane hose/regulator to the propane tank and hand tighten (DO NOT USE A WRENCH) and slide the propane tank past the dotted line to ensure the door closes properly.
- 2. With the tank inside, <u>ensure that no hoses</u>, <u>wires</u>, <u>or any other components are kinked or touching the burner pan.</u>

IMPORTANT

Please consult your Crystal Fire instruction manual for detailed instructions and important information related to the burner installation including: lighting and operating instructions, safety information, and proper tightening of connections with two wrenches.

DO NOT ATTEMPT TO INSTALL CRYSTAL FIRE BURNER WITHOUT FIRST CONSULTING THE CRYSTAL FIRE OWNER'S MANUAL.

WARNING

After consulting the manual and following instructions, remember; before operating, all gas connections must be fully checked for leaks

Warranty: Fire pit tables are covered under a 1-year manufacturer's warranty. Please visit http://www.outdoorrooms.com/warranty-form/ to register your product.



WARNING: This product can expose you to chemicals including Carbon Monoxide and Benzene which are known to the State of California to cause cancer or birth defects or reproductive harm. For more information, visit www.P65Warnings.ca.gov

14400 Southcross Drive West • Suite 100 • Burnsville, MN 55306 Toll Free: 1-866-303-4028 • Sales@OutdoorRooms.com