


Installation Instructions

40984302 NGX Power Distribution Unit

Your replacement Power Distribution Unit is supplied with an integrated pigtail ground wire and ring terminal. For proper safety grounding, the ground lug must be connected to chassis ground.

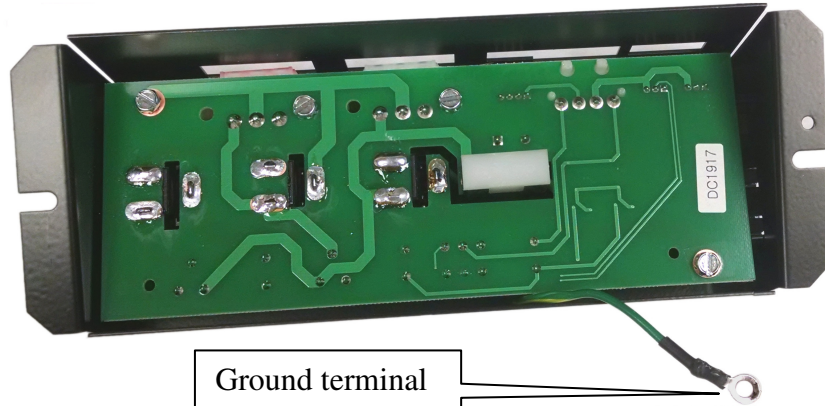

For newer NGX cabinets with a ground stud just below the Power Distribution Unit, connect the ring terminal to this stud reusing the #8-32 hex nut. Be sure the wire is not pinched by the chassis during installation.

For older NGX cabinets without a ground stud in the cabinet, connect the ring terminal to the screw holding the circuit board as shown here before installing the unit in the NGX cabinet.

