

MICRO TEMP MONITOR

VENOM TEMPERATURE MONITOR INSTALLATION

1. Slide the probe loop over the engine head and position it as close to the bottom of the head as possible (see illustration). For best results, ensure the probe sensor, which is under the heat shrink, is at a 90-degree angle to the exhaust port.
2. Securely install the unit in an easily accessible spot.
3. The POWER button controls power to the unit and resets the MIN/MAX function. To extend battery life, ensure the unit is turned off when not in use.
4. Use the MIN/MAX button to recall the highest temperature reached during a run. Simply press and release the button to view the reading. If the MIN reading is displayed, press the button again for the MAX value. The values reset when the unit is turned off. Use the C/F button to switch from Centigrade to Fahrenheit temperature readings.

Venom Group International
14028 N. Ohio St
Rathdrum, ID 83858
USA
Customer Service
800.705.0620
208.762.0620(outside USA)
customerservice@venom-group.com

Australia
PO Box 7325
Alexandria NSW 2015
Customer Service
customerservice@venom-group.com.au

