

INSTALLATION INSTRUCTIONS


(UNIVERSAL KIT FOR SEATS W/ 2 CONDUCTOR PLUG)

Heat installation kit # AC-HK-BMW-1


Congratulations!

You have purchased a heated World Sport Performance Seat designed to work seamlessly with the stock BMW on-board heat controller. NOTE: Because the heated World Sport Performance Seat plug is NOT compatible with the BMW OEM plug, a simple plug substitution is required. Per the instructions below, convert the plug on the BMW heated seat supply wires to the plug included in this kit.


- 1** Cut sheathing back approximately 4" wiring harness




- 2** Remove the BMW stock plug by cutting the wires approximately 2" from back of plug. Strip the insulation back 1/4-1/2" on all wires.. Note: Save the original BMW plug for future optional use. (See step 4)

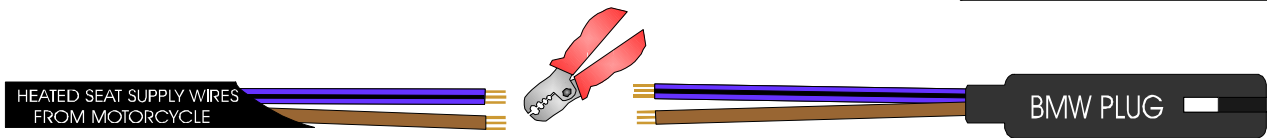

- 3** Crimp the pins onto the wire ends and insert them into the universal plug provided, paying close attention to the wire positions relative to the tapered side of the plug. As shown below, brown, then purple, starting with the tapered side.

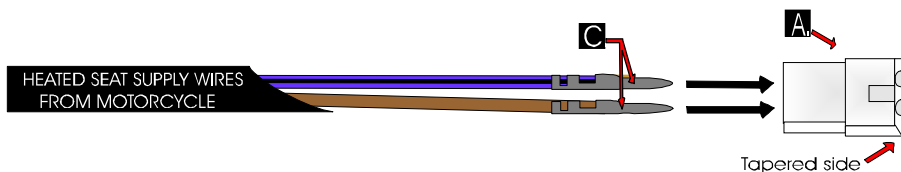

- 4** **Optional:** To enable the use of your stock heated seat in addition to your Sargent seat, simply crimp the provided sockets onto the wire ends of the stock BMW plug and insert them into the receptacle provided, paying close attention to the wire positions relative to the tapered side of the plug. As shown below, Brown then purple, starting with the tapered side.

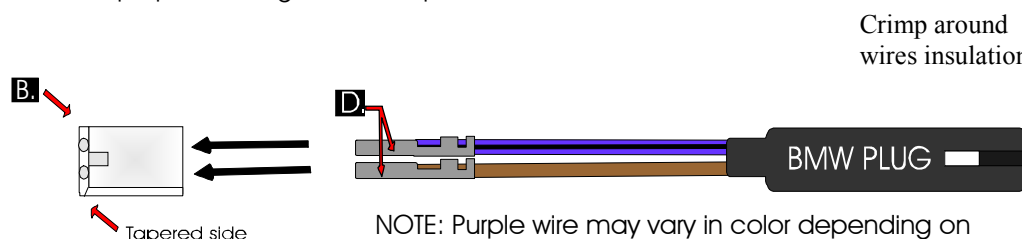


NOTE: Purple wire may vary in color depending on model and year of motorcycle.

INCLUDED IN KIT	
A. PLUG X 1	
B. RECEPTACLE X 1	
C. PIN X 4 (2 EXTRA)	
D. SOCKET X 4 (2 EXTRA)	

TOOLS NEEDED	
1. RAZOR BLADE (OR EQUIVALENT)	
2. WIRE CUTTERS/ STRIPERS	
3. CRIMPING DEVICE	

NOTE: TOOLS MUST HAVE A 20 GAUGE DESIGNATION.

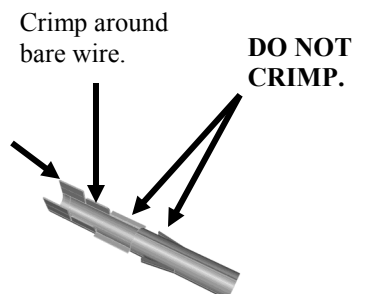

SARGENT
CYCLE PRODUCTS