


Pup-Lawn Patio Kit

Assembly Instructions

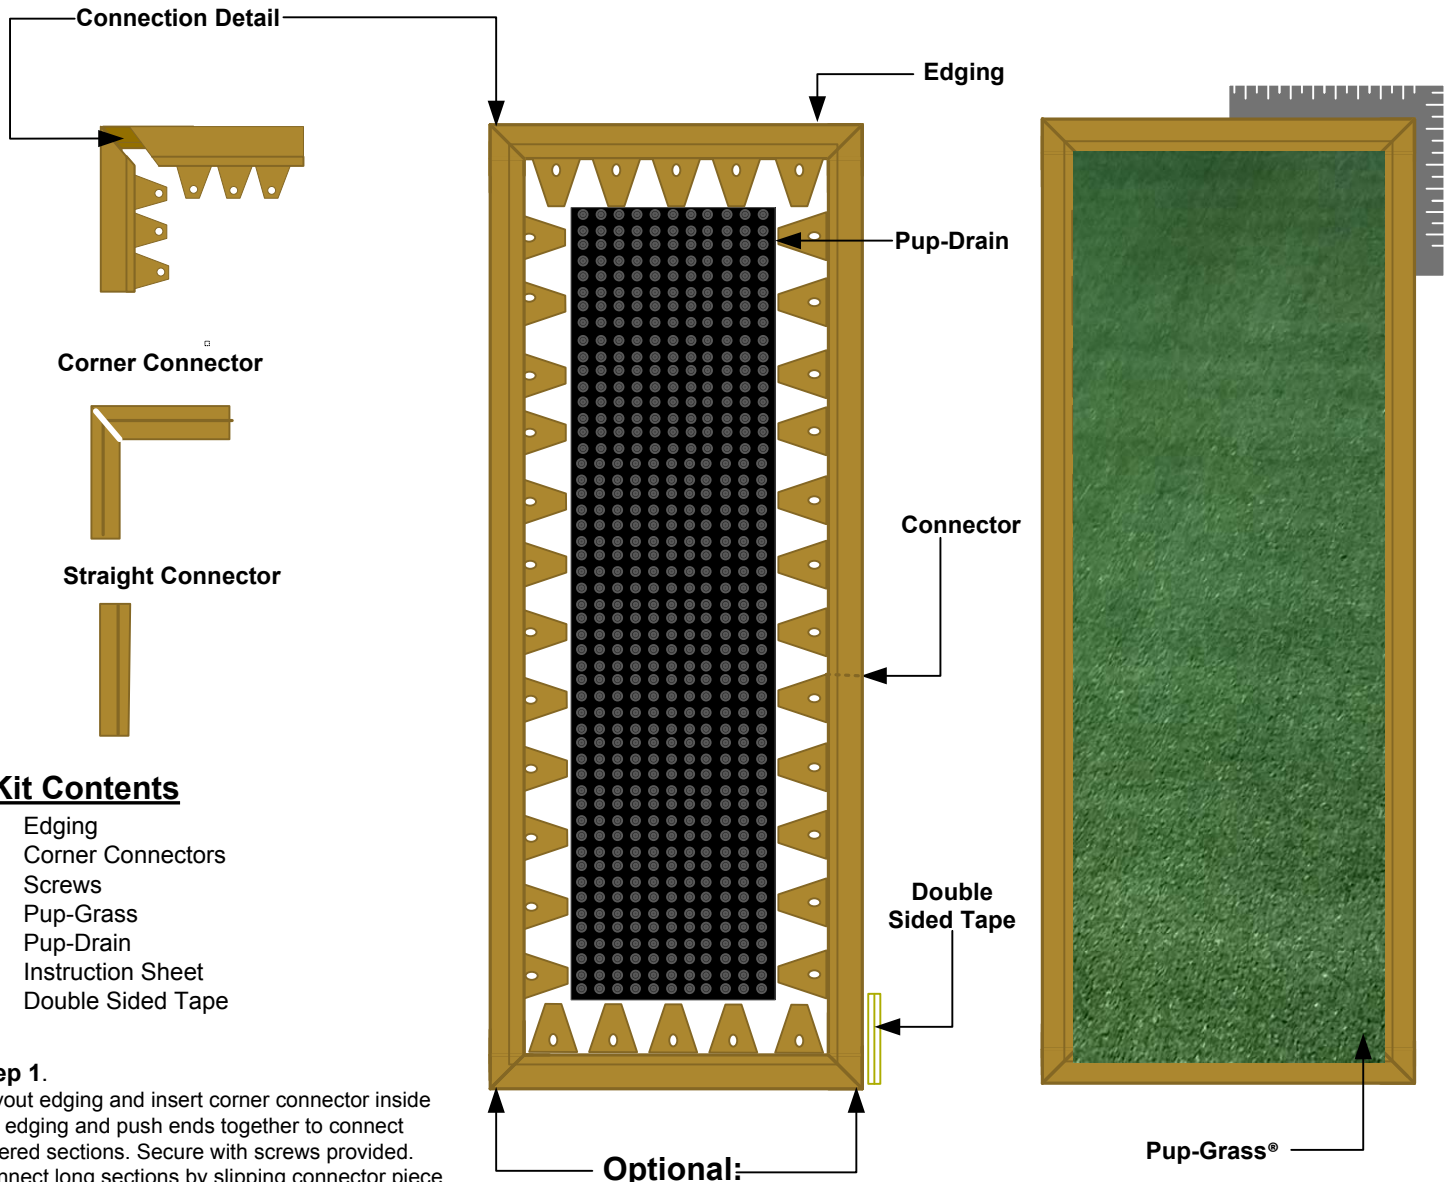

Kit Contents

- Edging
- Corner Connectors
- Screws
- Pup-Grass
- Pup-Drain
- Instruction Sheet
- Double Sided Tape

Step 1.

Layout edging and insert corner connector inside the edging and push ends together to connect mitered sections. Secure with screws provided. Connect long sections by slipping connector piece into the end of each section and push together.

Step 2.

Mark area making sure corners are square. Use concrete 3' apart nails or caulk to secure frame to patio. Space approximately 3' apart. After you have squared and secured frame, place Pup-Drain as shown with dimples up to edge of nail tabs

Step 3.

Place Pup-Grass over Pup-Drain. Using a flat putty type knife at least 4" wide, tuck Pup-Grass into edging lip. Once frame, Pup-Grass and Pup-Drain are secure, use a broom to brush grass blades.

Optional:

The frame must be kept square. You can nail glue frame or use double tape included. Place tape each corner of frame. Press down firmly until frame is secure.

Care and Maintenance

- It is not necessary to remove Pup-Grass® and Pup-Drain from the frame
- Remove solid waste from Pup-Grass®
- Use hose, watering can or bucket to flush Pup-Grass®
- If needed use an enzyme cleaner occasionally to remove urine odor.

