

# BMW K1200R

## Modular Seat System

### Instructions:

**Note:** Instructions apply to both the **Storage POD** and rear seat cushion accessories.


**IMPORTANT:** Perform assembly on a soft surface to prevent damage.

**Tools needed:**  
Phillips screw driver.

# 1

### Choose your accessory:

Insert tabs **(A)** of your accessory into slots **(B)** of the seat pan in a down and forward motion.

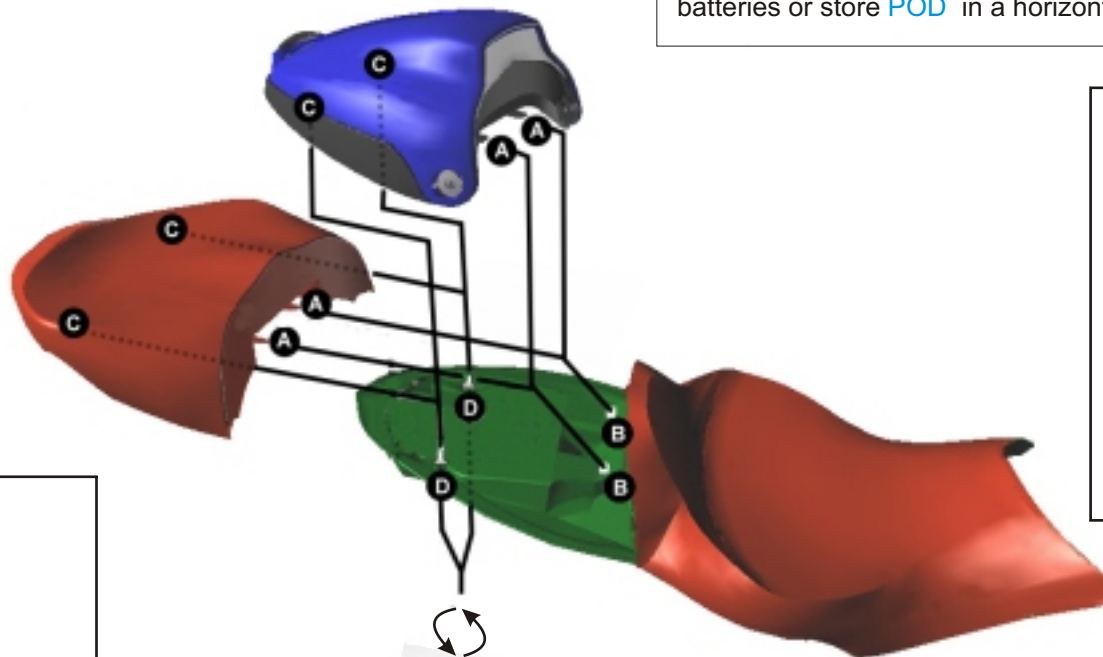

# 3

Use a phillips screw driver to engage (2) locking stud **(D)** on the bottom of the seat pan, onto the accessory receivers **(C)** by turning the studs **ONLY** 1/4 turn. **To insure you have properly secured your accessory, pull up at the rear of the accessory. It should remain firmly attached to the pan.**


1/4 turn

### POD light and batteries:

Two CR2430-3V batteries included. To activate **POD** light, remove clear plastic tab between batteries. To replace batteries, remove two phillips screws **(1)**, remove cover and circuit board **(2)** then remove and replace batteries **(3)**. Reassemble components as listed above in reverse order.

### IMPORTANT:

**Storage POD** light is tilt activated, for long term storage, remove batteries or store **POD** in a horizontal position.

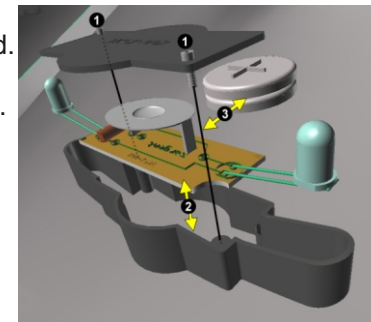


# 2

Lower rear of accessory into place.

Gently tuck back edge of the front seat under the leading edge of the **Storage POD** as you install the **POD** for ease of installation.

### Storage POD Latch and Lock

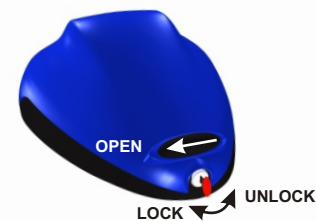

While standing at the rear of your motorcycle, slide the World Sport logo latch to the left to open your **Storage POD**. Locking the **Storage POD** will prevent the latch from opening the **POD**.

1-800-749-SEATS FAX 904-354-7979

WWW.SargentCycle.COM

**SARGENT**  
CYCLE PRODUCTS