

B427790


Premium Softball Pitcher's C-Screen ASSEMBLY INSTRUCTIONS

BOX CONTENTS

Description	Quantity
• Screen leg tube	4 each
• Leg Bracket	2 each
• #3 piece	1 each
• #4 piece	1 each
• #5 piece	1 each
• #6 piece	1 each
• #7 piece	1 each
• #8 piece	1 each
• #9 piece	1 each
• #10 piece	1 each
• #11 piece	1 each

HARWARE KIT CONTENTS

Description	Quantity
• 2 ¹ / ₂ " Flat head bolts	4 each
• Lock washers & Nuts	4 each
• 2" Hex head bolt with Nut	2 each

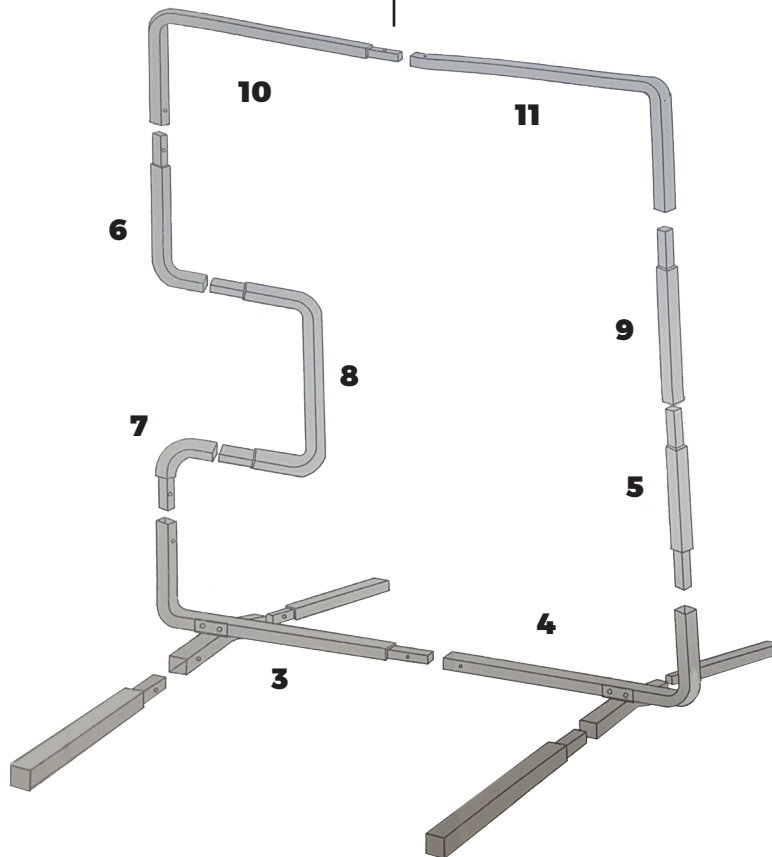


Note: Nets and frame should be inspected prior to each use. **DO NOT** use protective screen if holes are present in the netting. For use of this protective screen in batting cage setting we recommend adding Item # **B77PAD** kit designed for this frame.

Please call 888-313-1303 to order or visit us on the web www.trigonsports.com.


STEP 1 Unpack all items and lay on the ground

STEP 2

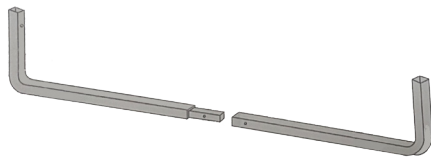


Begin assembling bottom frame attaching Part #3 to Part #4 using (1) each 2" Hex head bolt and nut. Tighten.

STEP 3

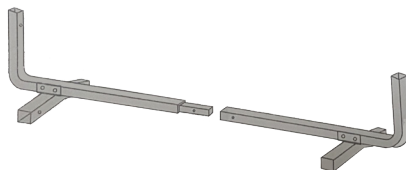

Attach leg frame brackets to each side of bottom frame using (2) each 2 1/2" bolts and (2) each lock washer and nut to each frame bracket. Tighten.


STEP 4

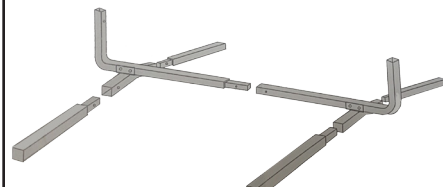

Insert each leg per bracket (one on each side) using push buttons attached.


STEP 5 Refer to diagram and finish assembly as show in drawing using push buttons attached. (See note on Step 7)

STEP 6

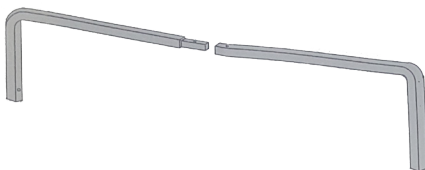


To attach Part #10 and #11 use (1) each 2" hex bolt and nut. Tighten.

STEP 7

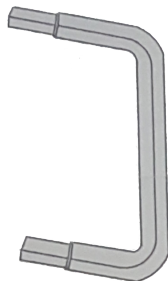

Do not assemble part #2 ("C" curved piece) until **AFTER** net is installed.

STEP 8

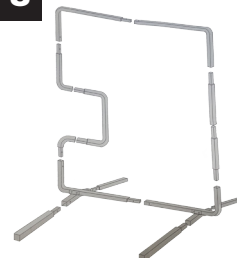

Pull pillowcase style net over top of frame.

STEP 9



To install part # 2 ("C" curved piece), lift piece underneath the net and put into place. Insert into Part #1 and Part #3 using push buttons attached.

STEP 10 Adjust net squarely on the frame and lace bottom of the net using lacing twine (already attached to bottom of net).

ASSEMBLED SCREEN

