


LM300 Glass Lens Kit Installation

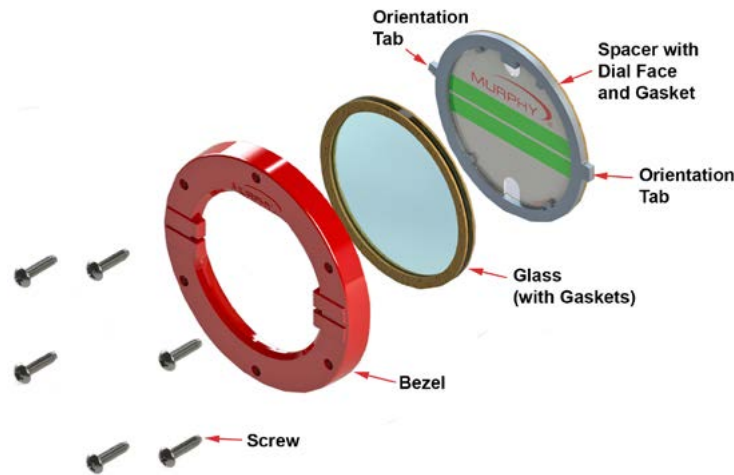

WARNING: Always use the proper protection when handling glass. Please consult the following OSHA web page for guidelines on Glass Handling before proceeding. <http://www.oshasafetymanuals.com/glass-handling/>

Inspection

1. Remove the screws, bezel, glass and spacer from packing material.
2. Inspect for any shipping damage.
3. Clean any fingerprints from the glass as necessary using a soft cloth with very mild detergent and water or isopropyl alcohol.

Bezel Assembly

1. From the bezel back side, insert the glass (with gaskets).
2. Place the spacer with dial face and gasket over the glass and align the orientation tabs to sit in the bezel grooves.
3. Install six screws from the front side of the bezel, and set aside.

Install

WARNING: Perform all installations with the power source OFF. Be sure engine has cooled and pressure has been relieved. Follow all safety practices to prevent SEVERE BURNS.

1. Clean the LM300 housing face removing any dirt or debris.
2. Align the bezel assembly screw holes and tabs to the housing face and hand-start six screws.
3. Using a cross pattern, tighten the six screws to specification.

Description	Torque Specification
Bezel Mounting Screw	38 in-lbs (48 Nm)



For additional information on the LM300 (specifications and installation instructions), search LM300 on the Murphy website (www.fwmurphy.com). At the LM300 web page, select the literature tab and choose Installation Instructions.



41343 12th Street West
Palmdale, California 93551-1442
661 272 4700 | www.murcal.com

MURPHY
PRODUCTION CONTROLS
www.fwmurphy.com

MurCal is an Authorized
Master Distributor